



# **Target Screen & Pellet Catcher User Manual**



**\*\*\*\*\* LIMITED LIABILITY WARRANTY \*\*\*\*\***

*This product is warranted to the retail customer for 12 months from date of purchase against defects in materials and workmanship and is transferable to any subsequent owner.*

*Proof of purchase is required to receive warranty repairs, please retain your purchase invoice.*

***What is covered***

*Replacement parts & labour on a 'back to base' basis, return transportation to the consumer (mainland UK only).*

***What is not covered***

*Transportation from the consumer to Air Arms.*

*Damage caused by misuse, abuse, lack of routine maintenance, transit damage between the dealer/supplier and the consumer or unauthorized disassembly.*

*Parts subject to normal wear and tear.*

*Any other consequential cost incurred by the consumer.*

*Return transportation to consumers outside mainland UK.*

***No warranty is implied as to the fitness for any particular purpose.***

***Air Arms reserves the right to make changes without prior notice.***

***Air Arms  
Unit 5 - 6,  
Hailsham Industrial Park,  
Diplocks Way,  
Hailsham,  
East Sussex BN27 3JF.***

***www.air-arms.co.uk  
general@air-arms.co.uk  
01323 845853***

Side bars



Complete frame



Bottom bar



Target bar





## Assembling the target screens

The target frame part assembled into five main components.

1. Two side bar assemblies, one left and one right.
2. One top bar assembly, fitted with the main curtains.
3. One bottom bar assembly.
4. One target bar assembly.

Assembly is best carried out with two or three people. The top bar assembly is heavy and can be difficult to maneuver.

First lay the components out on the floor as shown in the picture.



Lay the top bar down with the curtains flat on the floor with the bar on top of the curtains.

The two side bars are held either side at the bottom of the curtains with the string on the outside edge and the antiluce pointing away from the curtains.

The bottom bar is placed between the feet of the side bars.

The bottom bar can now be fitted to the side bars. The plate on the bottom bar has two holes in it. The top hole is slid over the antiluce on the side bar and the bottom hole fit on the location pin below the antiluce lock.


Once the plate is push back the catch can be turned and locked into place. This is best done with a **gentle** tap of a hammer.

**Note: The target bar location bosses should be on the outside of the frame (see bottom picture).**





Next lay the frame over so the top of the side bars are now next to the end of the top bar assembly. The antiluce can now be passed through the fitting hole in the top bar and the two locating pins can be positioned. Once the plate is pushed back to the bar the antiluce can be locked in place as before.

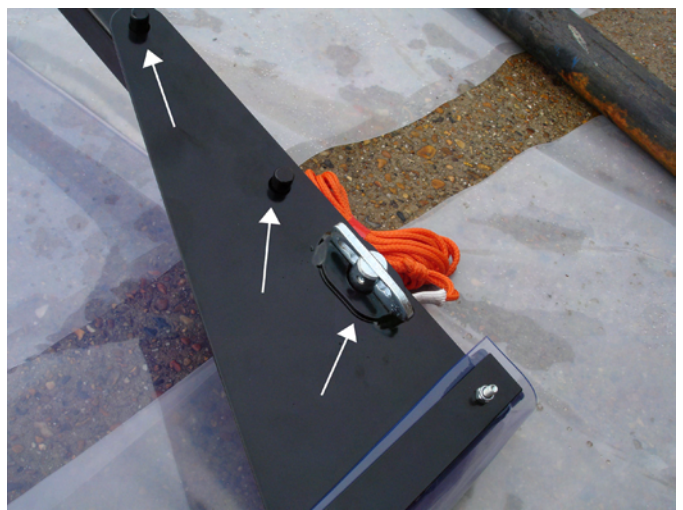



The frame can now be lift upright, the best way to do this is with three people. One person on each side and the third supporting the top frame. This way the weight is spread evenly.







Next attach the bungee line around the back of the side bars and fix the loop over the pin on the plate. Pull the bungee tab to take up any slack in the line.


The knot in the bungee **must** be in the correct position at the front on the screen, the arrows on the pictures below show how the knot should be placed.



CORRECT

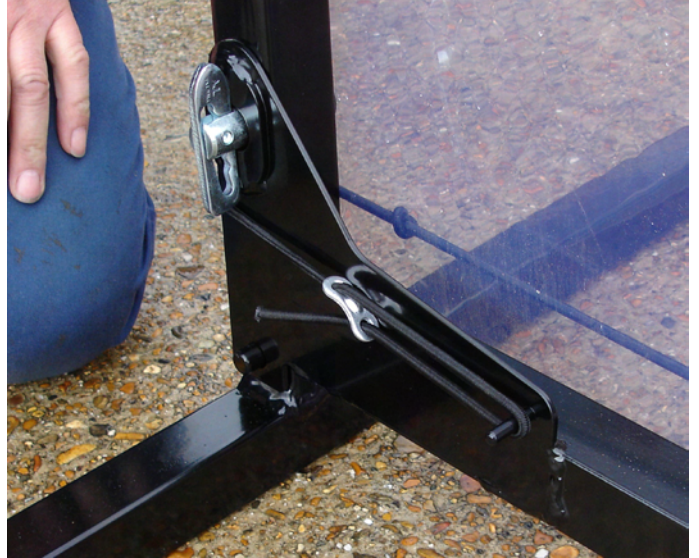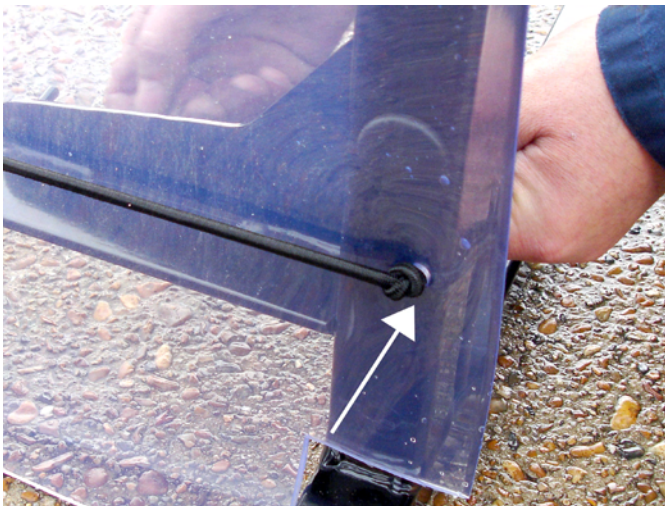

INCORRECT

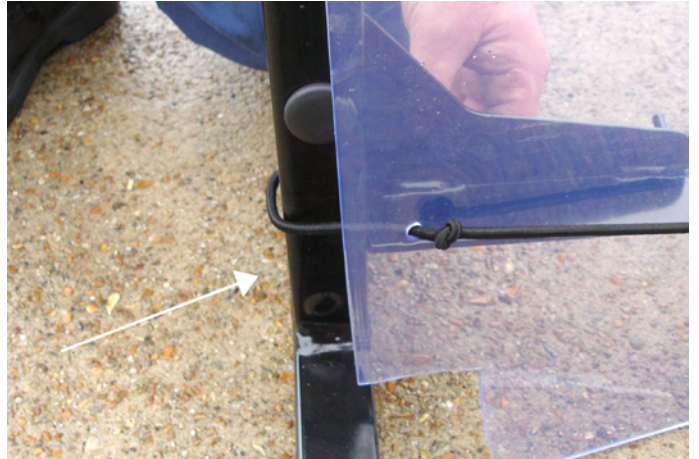

The target bar is fitted to the screen by hooking it onto the bosses on each side of the frame. The bracket on the target bar slides onto the boss and is push down to lock into place.






## The finished target screen




## The Target Holder assembly

The target holder assembly comprises of three pellet catchers and target holders mounted to a wooden bar. This bar can be fitted to the Target Screens at three height positions.

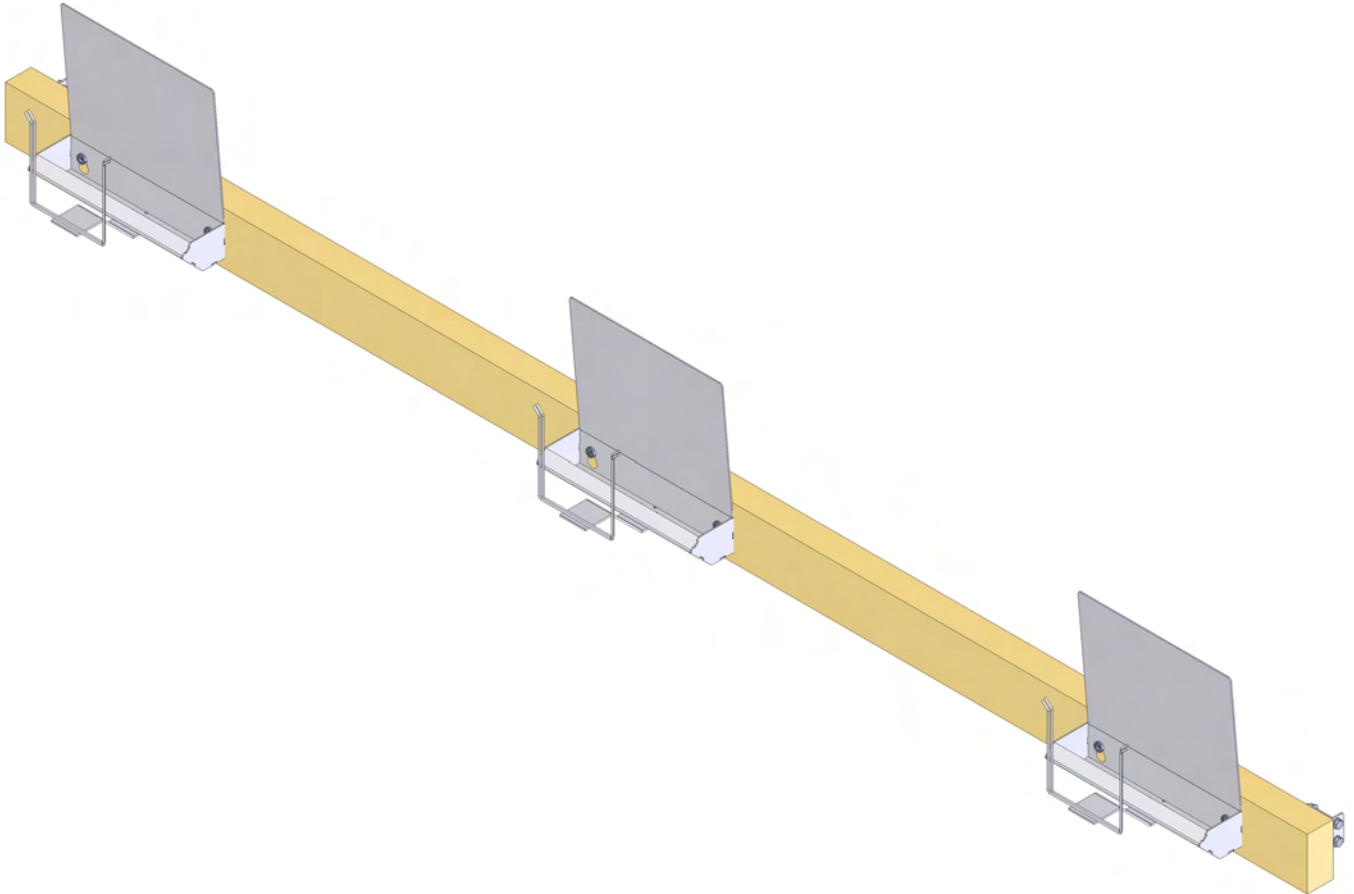

The assembly of the target holder is straight forward and you will find an exploded diagram in the back of this manual showing where all the parts go.

One area requires extra mention. The mounting boss (No.10) for the pellet catcher must not be over tightened as this may make it difficult to slide the keyway on the back of the pellet catcher over the boss.

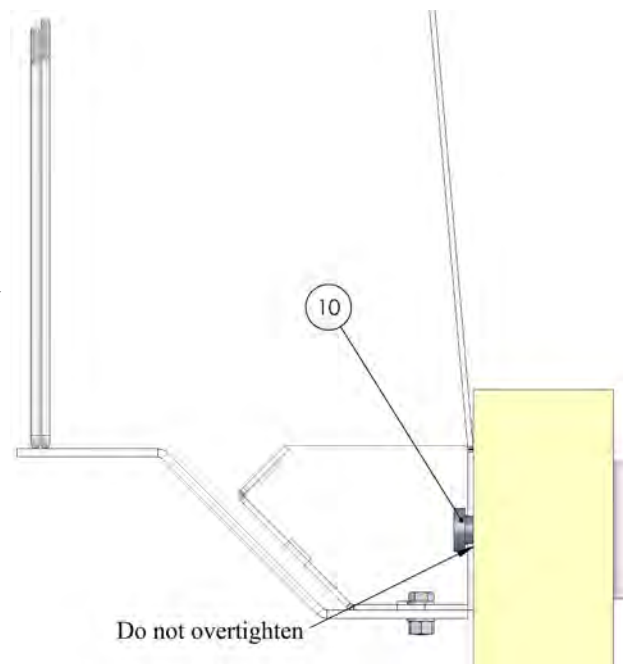



The pellet catcher can be set to three different positions on the target screen. These are for standing, kneeling and prone.

On The outside on the side bars are the three locations for the target bar to be hung from.